 
 


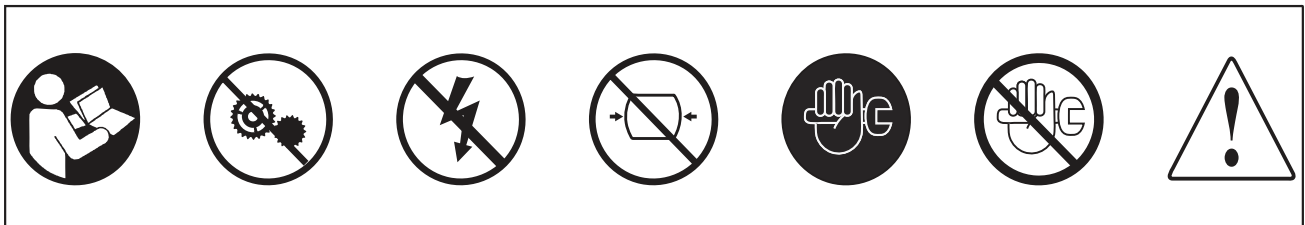


THERMO KING



TouchPrint Datalogger LANGUAGE FREE USER MANUAL

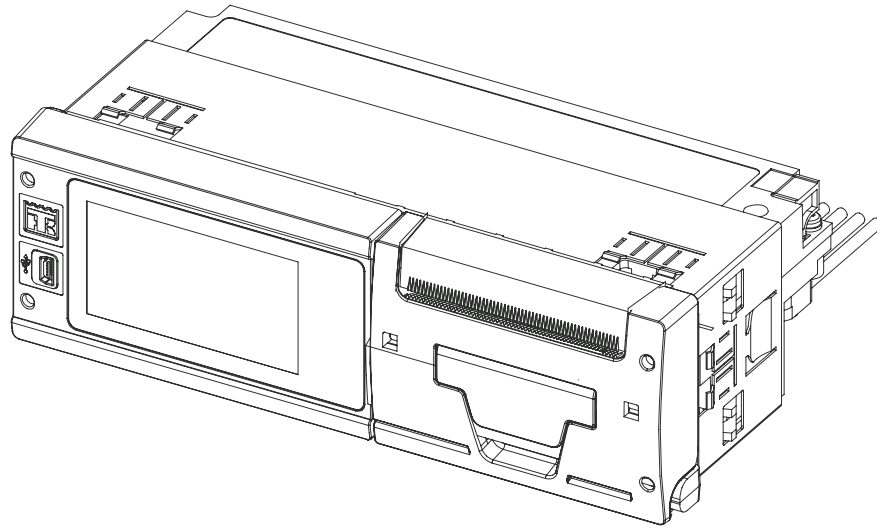

 1. RELOADING THE PAPER ROLL

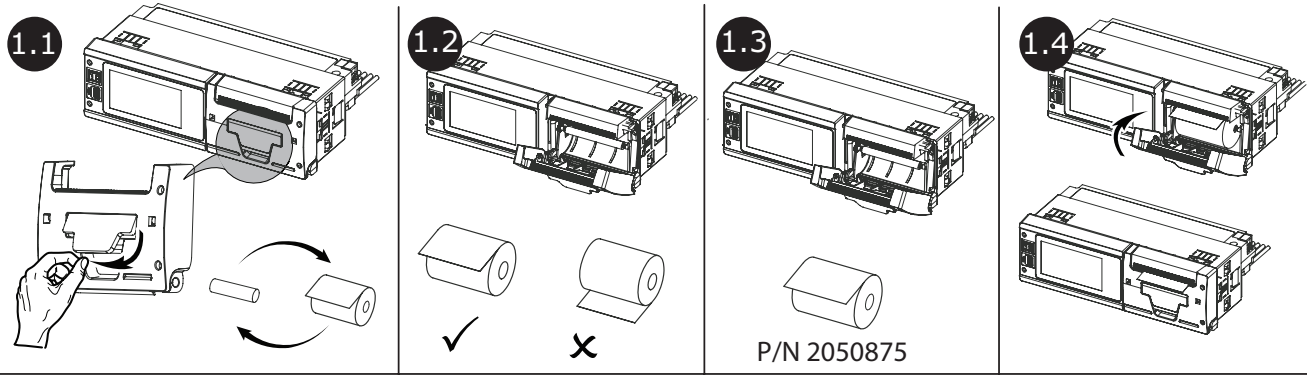

  2. BASIC MENU OPERATION

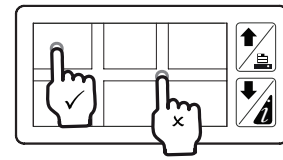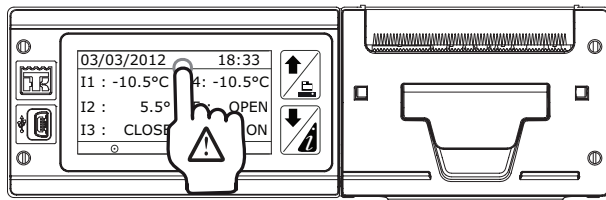

8 Buttons

 


Quick Print



Quick Info

3. MAIN MENU

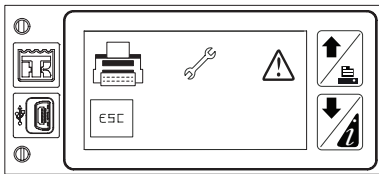

Print Menu

 
 


User Menu



Alarm Menu

4. PRINT MENU

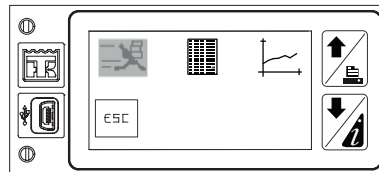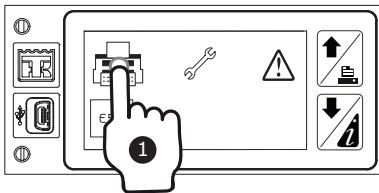

Delivery Ticket

 


Trip Ticket





Journey Ticket Graph

4.1 PRINTING A DELIVERY TICKET

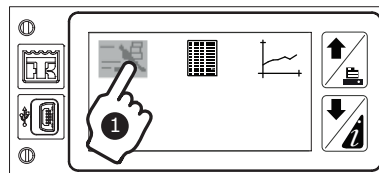

  4.2 PRINTING A TRIP TICKET

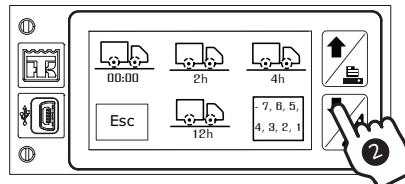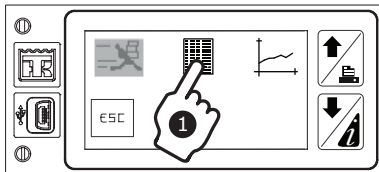

Midnight till now



 
Past 2 hours



Past 4 hours




Past 12 hours



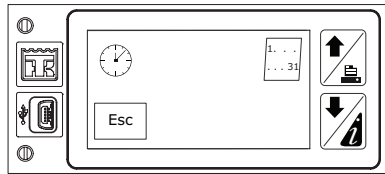


- Specific day from the past 7 days
- Specific start time to present time
- Specific start and end date

 4.3 CANCEL PRINTING

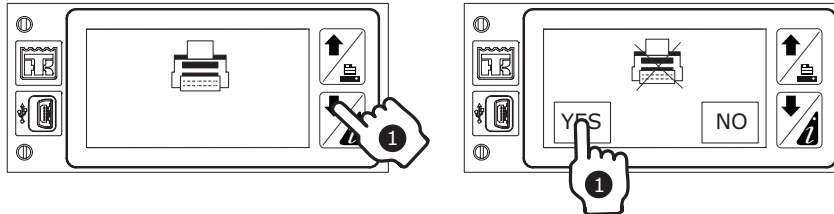


   5. USER MENU

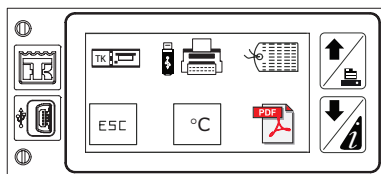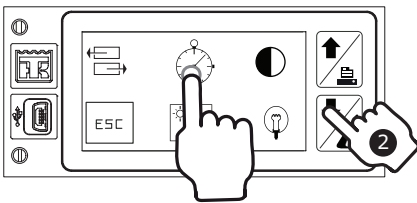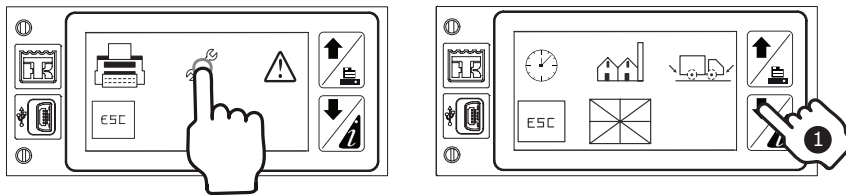


- Adjusting the Time & the Date
- Company Reference
- Trailer ID
- Language
- Input Setting
- Temperature Unit
- Export in Pdf/ txt
- Logging Interval
- Contrast
- Daylight Saving Time Set
- Brightness
- Touchprint Firmware
- Media Selection For Printing
- Labels



 
5.1 ADJUSTING THE TIME & THE DATE

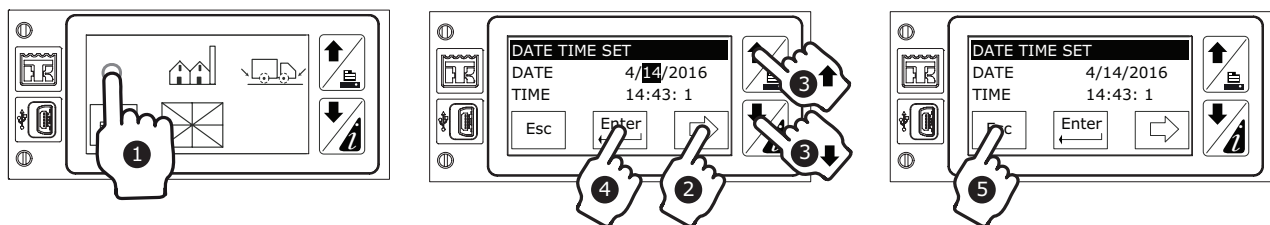



 
5.2 COMPANY REFERENCE

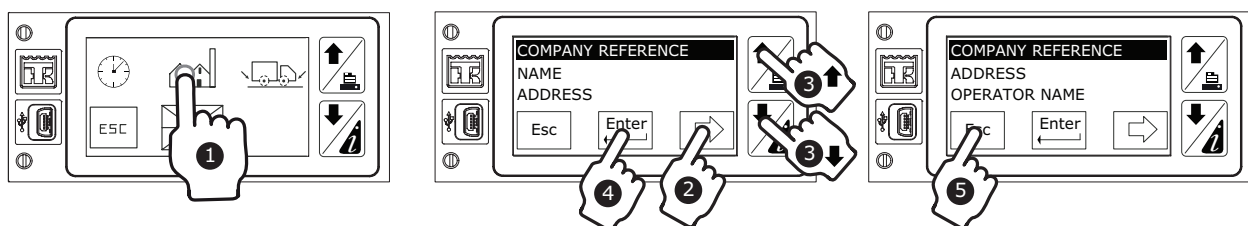

 
 
 
5.3 TRAILER ID

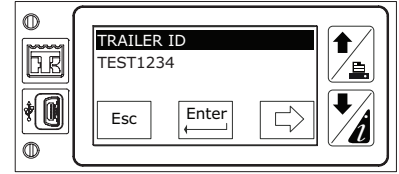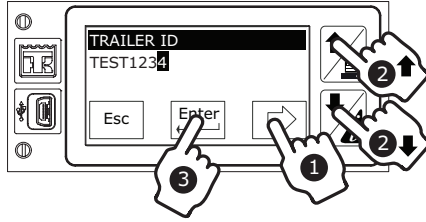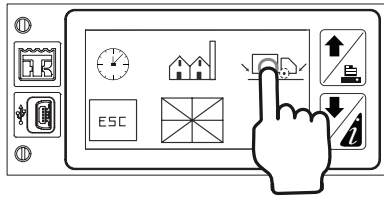

 
 
 
5.4 LANGUAGE SELECTION

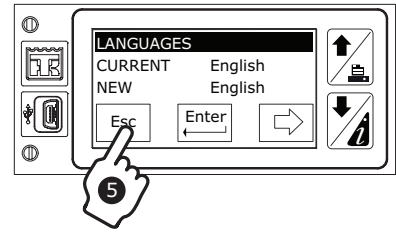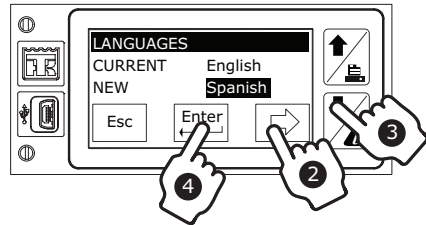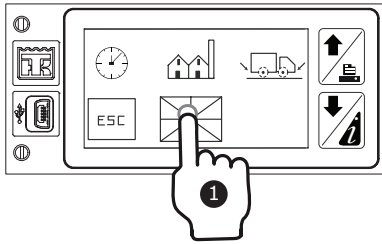

 
 
 
5.5 SETTING THE LOGGING INTERVAL

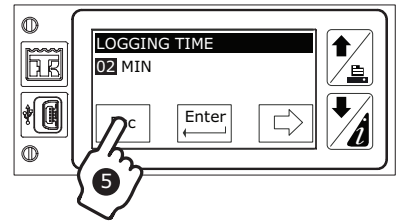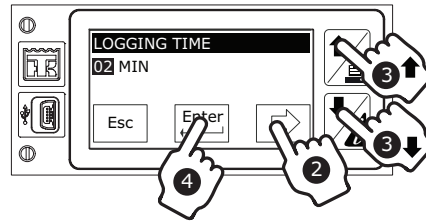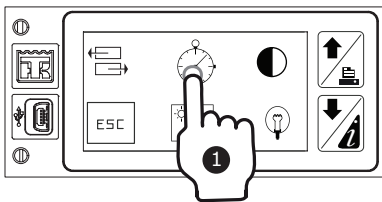

   
5.6 CHANGE CONTRAST SETTING

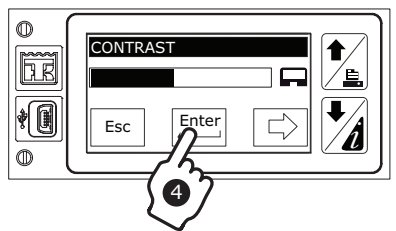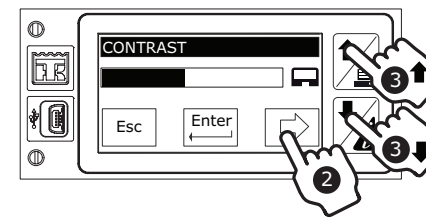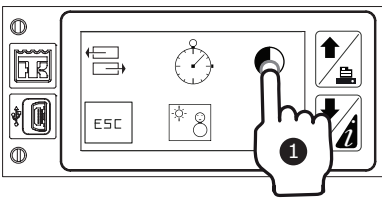

   
5.7 DAYLIGHT SAVING TIMESET

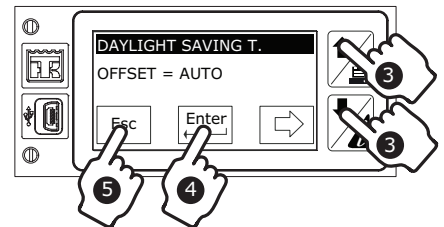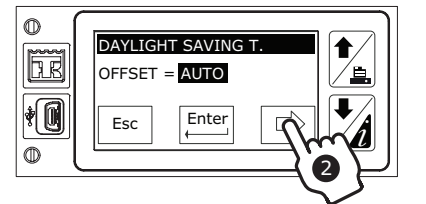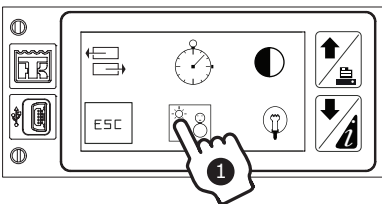

 
5.8 BACKLIGHT SETTINGS

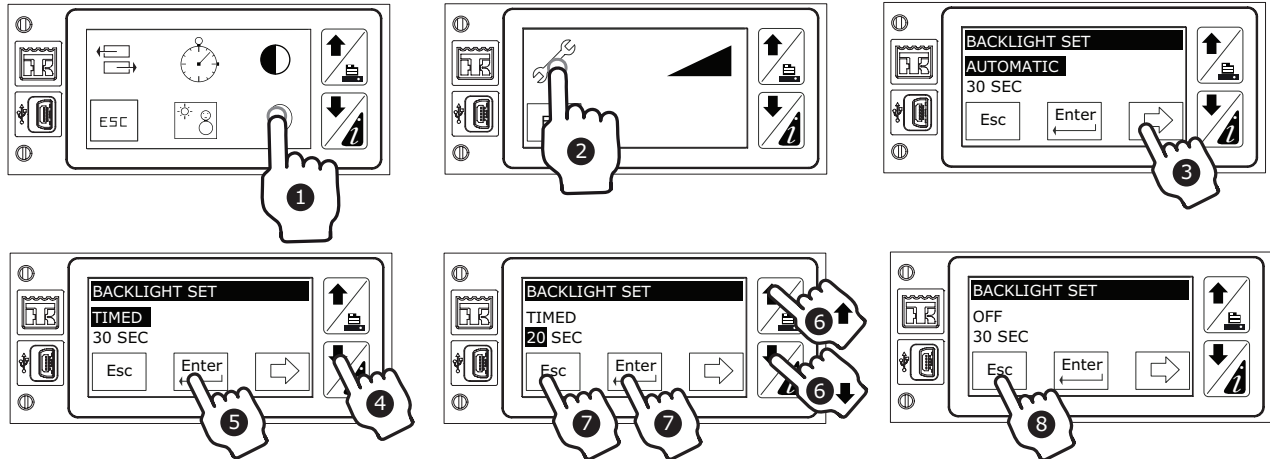

 
5.9 BRIGHTNESS SETTING

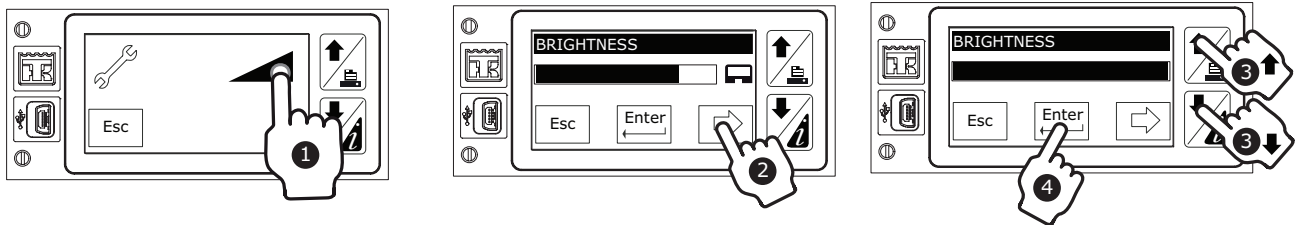

 
5.10 MEDIA SELECTION FOR PRINTING

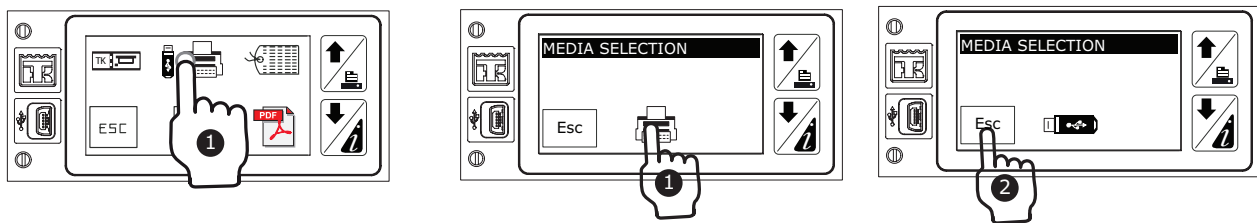

 
5.11 CHANGING THE TEMPERATURE UNIT OF MEASURE

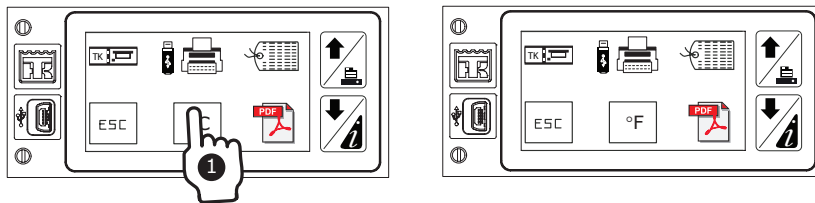

 
5.12 EXPORT IN PDF/ TXT FORMAT

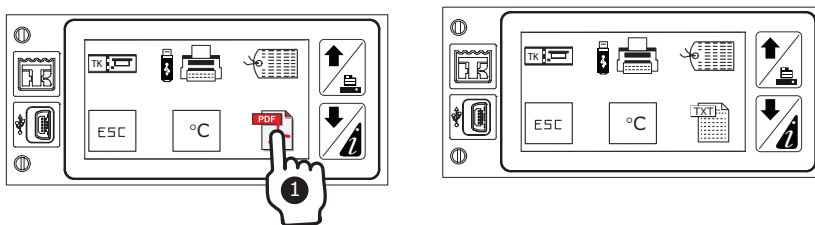

 
6. ALARM MENU

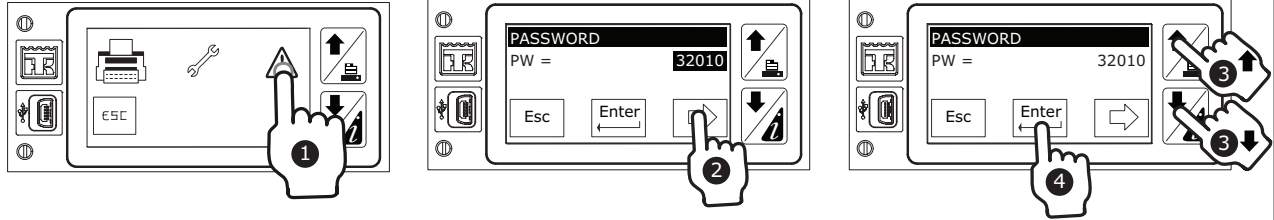

 
6.1 SETTING INPUT TEMPERATURE RANGE

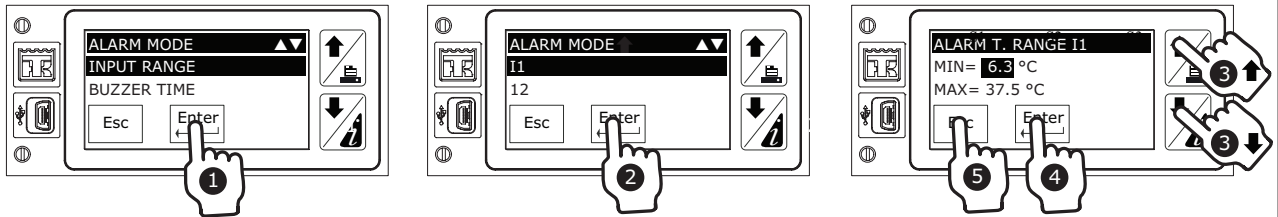

 
6.2 SETTING BUZZER TIME

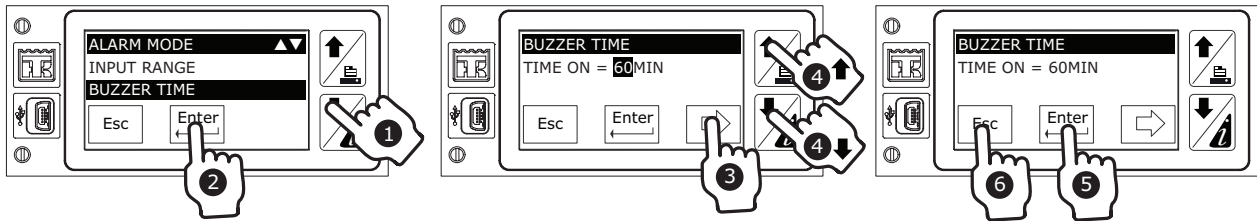

 
6.3 SETTING OUTPUT TIME

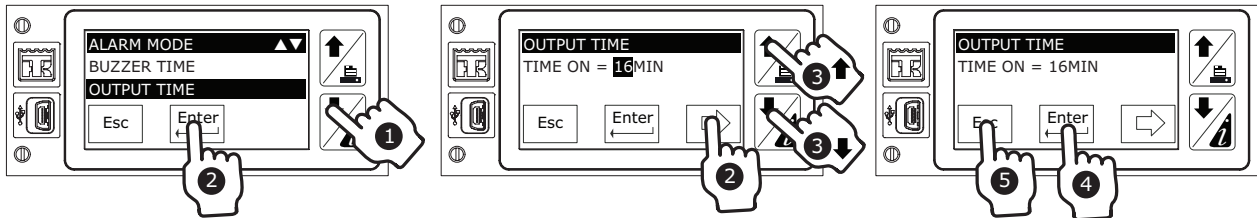

 6.4. CLEARING THE ALARM



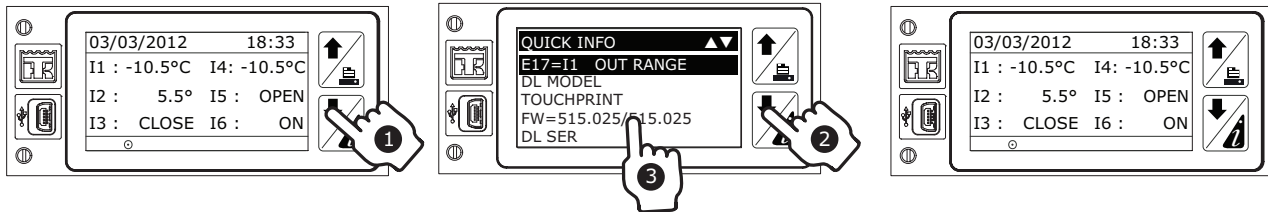


 7. ADVANCED OPERATION

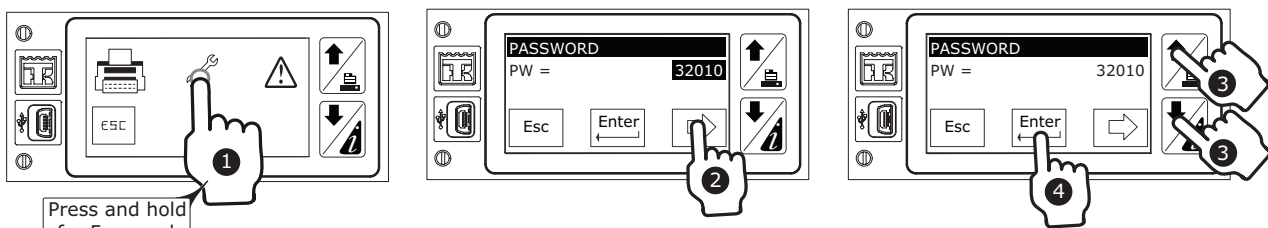

Press and hold for 5 seconds

   7.1 SERVICE MENU

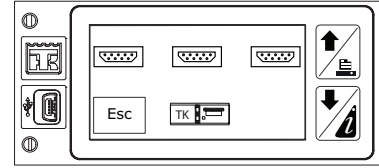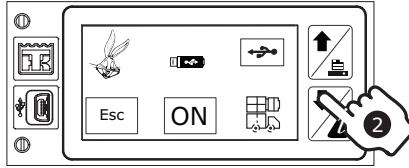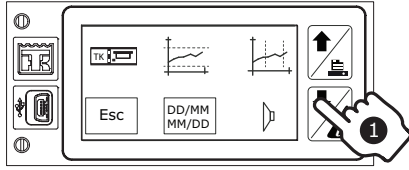

Datalogger Model Name

Buzzer Sound

ON ON/AUTO/OFF Data Logging

Temperature Range for Graph Printing

Short Logging Interval

Format Zone Selection

Time Scale for Graph Printing

Firmware Update

 
 
UART Setting

Date Format




Wintrac Interface Via USB

Trailer Vs Truck Installation




7.2 DATALOGGER MODEL

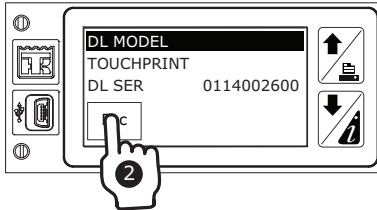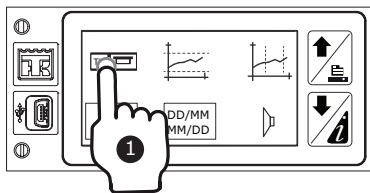

 
 
 
7.3 TEMPERATURE RANGE FOR GRAPH PRINT

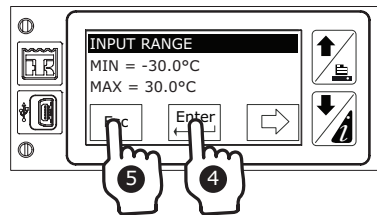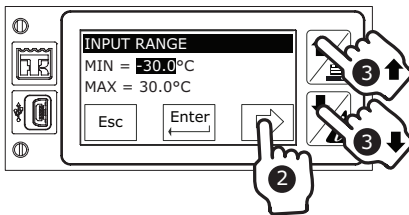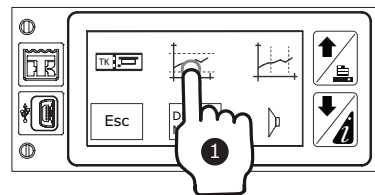

   
7.4 TIME SCALE FOR GRAPH PRINT

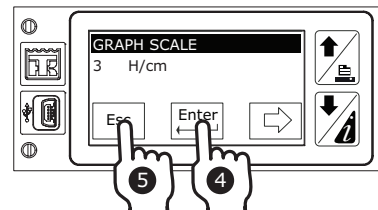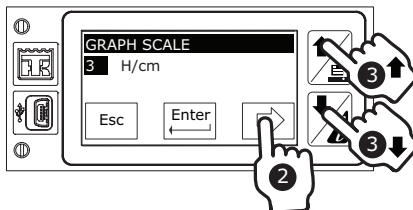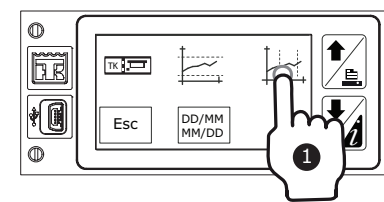

   
7.5 DATE FORMAT

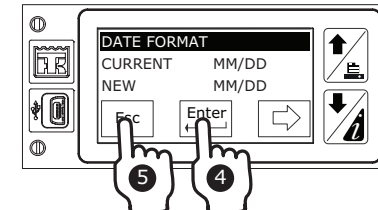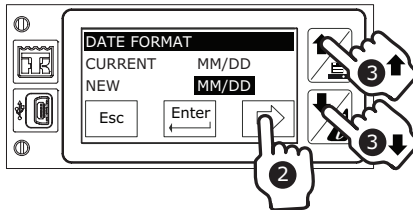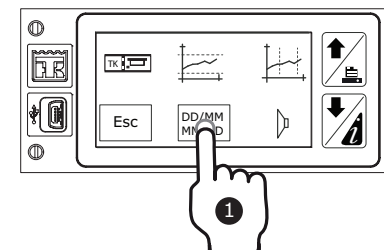

 
7.6 BUZZER SOUND

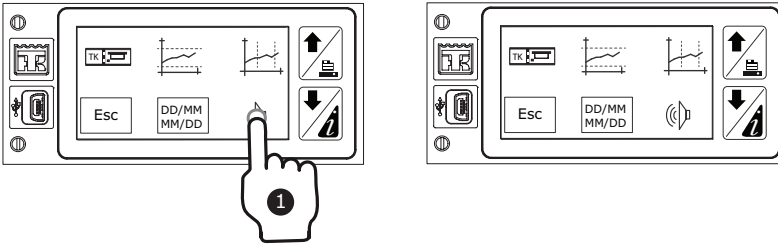

 
7.7 FIRMWARE UPDATE

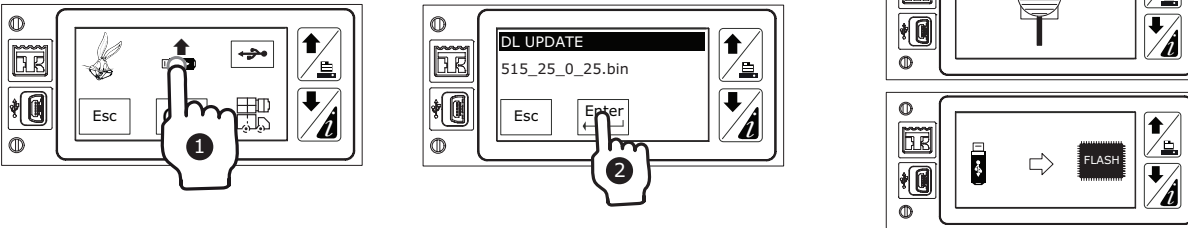

 7.8 LOGGING MODES: ON, AUTO, OFF

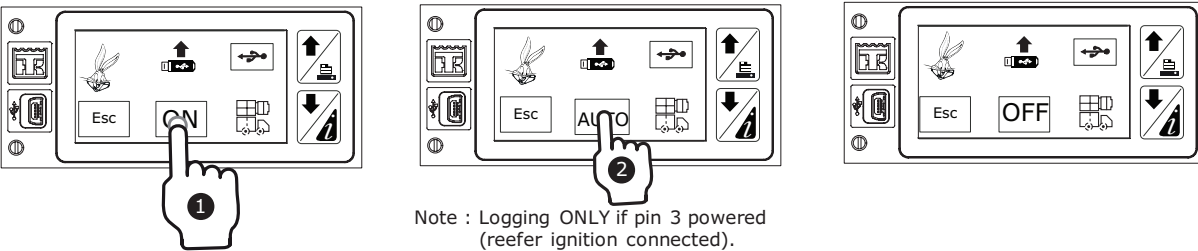

 7.9 ZONES SELECTION

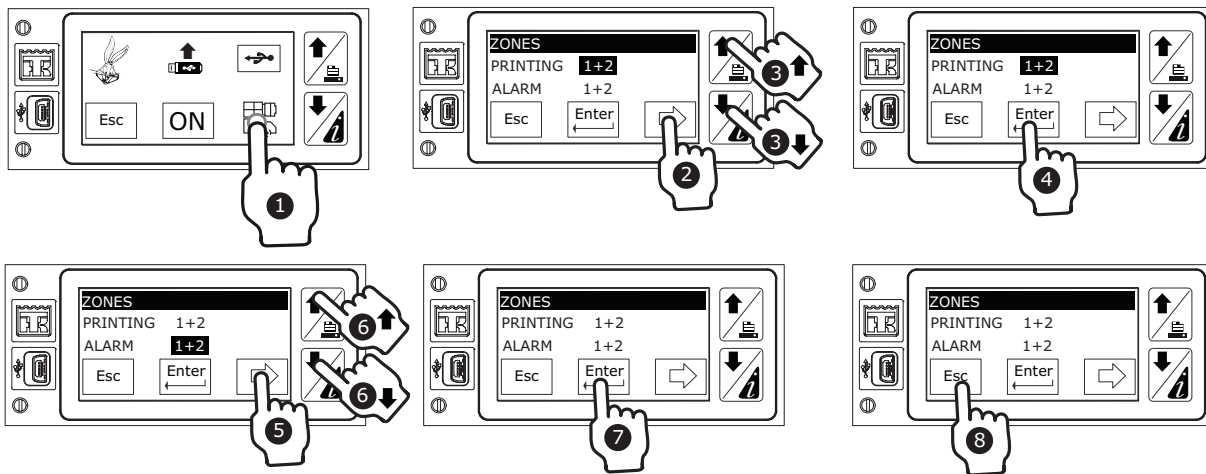

7.10 TRUCK VS TRAILER SELECTION

